

Samsung ML-1630	Samsung SCX-6122	Samsung ML-1640/1641/1645 (MLT-D108)	Sharp AR-120/150/155. AR-F151
Samsung ML-1631	Samsung SCX-6220	Samsung ML-	Sharp AR-121/122/151/152/153/156/157/5012/5415. AR-
Samsung ML-2450	Samsung SCX-6320	1660/1665/1667/1670/1673/1674/1675/1676/16	M150/M155
Samsung ML-2850	Samsung SCX-6322	77/1678/1860/1865/1867 (MLT-D104)	Sharp AR-160/162/163/164/201/206/207. AR-
Samsung ML-2851	Samsung SCX-4250	Samsung ML-1910/1915/2525/2540/2545/2580	M160/M165/M205/M207. AR-F201 Xerox Phaser - 3010
Samsung ML-3050	Samsung SCX-4520	(MLT-D105)	Xerox Phaser - 3040
Samsung ML-3051	Samsung SCX-4720	Samsung ML-2240/2241 (MLT-D108)	Xerox WorkCentre - 3045
Samsung ML-3470	Samsung SCX-4200	Samsung ML-2245 (MLT-D106)	Xerox Phaser - 6000 (BI/M/C/Y)
Samsung ML-3471	Samsung ML-1661 (Region UKR)	Samsung ML-2855 (MLT-D209)	Xerox Phaser - 6010 (BI/M/C/Y)
Samsung ML-3472	Samsung ML-1671 (Region UKR)	Samsung ML-2950/2951/2955/2956 (MLT-D103)	Xerox WorkCentre - 6015 (BI/M/C/Y)
Samsung ML-4050	Samsung ML-1676 (Region UKR)	Samsung ML-3310/3312/3710/3712 (MLT-D205)	Xerox Phaser - 6500/6505 (BI/M/C/Y)
Samsung ML-4550	Samsung ML-1861 (Region UKR)	Samsung ML-3750/3753 (MLT-D305)	Xerox DocuPrint - P205
Samsung ML-4551	Samsung ML-1866 (Region UKR)	Samsung SCX-	Xerox DocuPrint - M205
Samsung SCX-4500	Samsung ML-3560	3200/3201/3205/3206/3207/3208/3217/3218	Xerox DocuPrint - CP105 (BI/M/C/Y)
Samsung SCX-4501	Samsung ML-3561	(MLT-D104)	Xerox DocuPrint - CP205 (BI/M/C/Y)
Samsung SCX-4725	Samsung ML-2550/2551/2552	Samsung SCX-4223 (MLT-D109)	Xerox DocuPrint - CM205 (BI/M/C/Y)
Samsung SCX-5330	Samsung ML-2250/2251/2252	Samsung SCX-4300/4310/4315 (MLT-D109)	Epson AcuLaser - M1400
Samsung SCX-5525	Samsung ML-2150/2151/2152	Samsung SCX-4727/4728/4729 (MLT-D103)	Epson AcuLaser - MX14
Samsung SCX-5530	Samsung CLP-600 (BI/M/C/Y)	Samsung SCX-4600/4601/4606/4623 (MLT-D105)	Epson AcuLaser - MX14NF
Samsung CF-560	Samsung CLP-600 (Image Unit)	Samsung SCX-4650M/4655FN (MLT-D117)	Epson AcuLaser - C1700 (BI/M/C/Y)
Samsung CF-565	Samsung CLP-650 (BI/M/C/Y)	Samsung SCX-4824 (MLT-D209)	Epson AcuLaser - C1750 (BI/M/C/Y)
Samsung SF-560	Samsung CLP-650 (Image Unit)	Samsung SCX-4828 (MLT-D209)	Epson AcuLaser - CX17NF (BI/M/C/Y)
Samsung SF-565	Samsung CLP-560 (BI/M/C/Y)	Samsung SCX-4833/4835/5637/5639/5737/5739	Dell - 1250 (BI/M/C/Y)
Samsung CLP-350 (BI/M/C/Y)	Samsung CLP-515 (BI/M/C/Y)	(MLT-D205)	Dell - 1350 (BI/M/C/Y)
Samsung CLP-351 (BI/M/C/Y)	Samsung CLP-511 (BI/M/C/Y)	Samsung SF-650 (MLT-D105)	Dell - 1355 (BI/M/C/Y)
Samsung CLP-610 (BI/M/C/Y)	Samsung CLP-510 (BI/M/C/Y)	Samsung CLP-310/315. CLX-3170/3171/3175 (CLT-	Sharp AR-203E/5420. AR-M201
Samsung CLP-660 (BI/M/C/Y)	Samsung CLP-510 (Transfer)	409)	Sharp AR-215/235/275. AR-M236/M276
Samsung CLX-6200 (BI/M/C/Y)	Samsung CLP-300 (BI/M/C/Y)	Samsung CLP-320/325. CLX-3185 (CLT-407)	Xerox Work Centre Pro 423, 428
Samsung CLX-6210 (BI/M/C/Y)	Samsung CLP-300 (Image Unit)	Samsung CLP-615/620/670. CLX-6220/6250 (CLT-	Xerox Work Centre 315
Samsung CLX-6240 (BI/M/C/Y)	Samsung CLP-300 (Formater)	508)	Xerox Document Centre 220
Xerox Phaser-3200 MFP	Xerox DocuPrint-205 (Emulator)	Samsung CLP-770/775 (CLT-609)	Xerox Document Centre 230
Xerox Phaser-3250	Xerox DocuPrint-255 (Emulator)	Xerox WorkCentre-3210/3220	Xerox Document Centre 340
Xerox Phaser-3300 MFP	Xerox DocuPrint-305 (Emulator)	Xerox WorkCentre-3315	Xerox Document Centre 420
Xerox Phaser-3428	Xerox DocuPrint-4525 (Emulator)	Xerox WorkCentre-3325	Xerox Document Centre 440
Xerox Phaser-3435	Xerox DocuPrint-C1110 (BI/M/C/Y)	Xerox WorkCentre-3550	Xerox Document Centre 235, 285
Xerox Phaser-3600 (Xerox DocuPrint-C1110 (Image Unit)	Xerox Phaser-3140/3155/3160	Xerox DocuPrint 3225
Xerox Phaser-3635 MFP	Xerox WC-PE220	Xerox Phaser-3320	Xerox DocuPrint 4025
Ricoh Aficio SP-3200 SF	Xerox WC-PE120	Dell-1130/1133/1135	Xerox DocuPrint 4525
Ricoh Aficio SP-3300	Xerox WC-M20i		Xerox DocuColor 4LP
Ricoh Aficio SP-5100 N	Xerox WC-4118		Xerox DC12
Dell-1815	Xerox WC-3119		Xerox DC212, 214
Gestetner SP-3200 SF	Xerox WC Pro-423 (Emulator)		Xerox DC265
Gestetner SP-3300	Xerox WC Pro-428 (Emulator)		Xerox DC432
Gestetner SP-5100 N	Xerox WC-7328 (Drum Chip)		Xerox DCS35
AT885C0204C/CA "S502-1"	Xerox WC-7335 (Drum Chip)		Xerox N32
(с динамическими паролями)	Xerox WC-7345 (Drum Chip)		Xerox Phaser 780
Samsung ML-1635	Xerox WC-7346 (Drum Chip)		Xerox Phaser 790
Samsung ML-3475	Xerox Phaser-850 (Drum Chip)		
Samsung SCX-4645 (Toner, Drum)	Xerox Phaser-7760 (Drum Chip)		
Samsung SCX-5635	Xerox Phaser-7750 (Drum Chip)		
Samsung SCX-5835	Xerox Phaser-7700 (Drum Chip)		
Samsung SCX-5935	Xerox Phaser-6140 (BI/M/C/Y)		
Samsung SCX-6545 (Toner, Drum)	Xerox Phaser-6130 (BI/M/C/Y)		
Samsung SCX-6555	Xerox Phaser-6128 (BI/M/C/Y)		
Xerox WorkCentre-4250	Xerox Phaser-6125 (BI/M/C/Y)		
Xerox WorkCentre-4260 (Xerox Phaser-6110 (BI/M/C/Y)		
Dell-2335	Xerox Phaser-6110 (Image Unit)		
	Xerox Phaser-6100 (BI/M/C/Y)		
	Xerox Phaser-6300 (BI/M/C/Y) (Emulator)		
	Xerox Phaser-6360 (BI/M/C/Y) (Emulator)		